

GENIO Basic Setting

VIA IP NETWORK







เชื่อมต่อสายแลนระหว่างแผงควบคุมกับ PC









1.เลือกไอคอน 🚨 มุมขวาด้านล่างของ หน้า เคสก์ท็อป

2.เลือกไอคอน

Unidentified network No Internet



TRAFFIC 8

CONFIGURE SETTING









Ethernet



CONFIGURE SETTING



| Vetworking | Sharing | | | | |
|----------------------------------|---|--|---|-------------------------|--------|
| Connect us | sing: | | | | |
| 🚍 Rea | tek PCIe FE | E Family Control | ler | | |
| | | | | Configure | ə |
| This conne | ction uses t | he following ite | ms: | | |
| | ient for Micro le and Printe pcap Packe oS Packet S ortiClient ND ternet Proto- icrosoft Netv | osoft Networks er Sharing for M et Driver (NPCA Scheduler IS 6.3 Packet col Version 4 (work Adapter M | licrosoft Netv P) Filter Driver FCP/IPv4) fultiplexor Pro | vorks | ^ > |
| Descripti Allows y network | all on our compute | Uninstal er to access res | ources on a | Propertie: Microsoft | S |
| | | | | | |

5.เลือกไอคอน <a>Properties

6.เลือกไอคอน ⊻ _ Internet Protocol Version 4 (TCP/IPv4)





CONFIGURE SETTING

| nternet Protocol Version 4 (TCP/IPv | 4) Properties |
|--|---|
| General | |
| You can get IP settings assigned aut this capability. Otherwise, you need for the appropriate IP settings. | comatically if your network supports to ask your network administrator |
| Obtain an IP address automatic | ally |
| Ose the following IP address: | |
| IP address: | 192 . 168 . 216 . 10 |
| Subnet mask: | 255 . 255 . 255 . 0 |
| Default gateway: | |
| Obtain DNS server address aut | omatically |
| • Use the following DNS server a | ddresses: |
| Preferred DNS server: | |
| Alternate DNS server: | |
| Validate settings upon exit | Advanced |
| | OK Cancel |
| 1 | OK Cancel |

| ตัวอย่างIP แผงคว | บคุม <u>192.168.216.24</u> |
|--------------------|----------------------------|
| ใส่ IP address ของ | ง PC เป็น |
| IP address: | 192 . 168 . 216 . 10 |
| | |
| Subnet mask: | 255 . 255 . 255 . 0 |

8.หลังจากเปลี่ยน IP address ของ PC แล้วให้กด OK ไปเรื่อยๆ









1. Double click "Finder.exe"

2.คลิกที่ "Search" มันจะเริ่มค้นหาที่ อยู่ IP ที่รู้จักภายในบริการเครือข่าย

- 3. Double click IP ของแผงควบคุม
- 4.เข้าสู่หน้า Sign in

Default

User::admin

Password::cX+HsA*7F1

***หลังจากLog in ครั้งแรก แผงควบคุมจะบังคับให้เปลี่ยน Password ให้เปลี่ยนเป็น User::admin Password::admin12345



| Sign in http://192.10 | 58.216.24:90 | |
|--------------------------|----------------------------------|--------|
| Your connec Username | tion to this site is not private | |
| Password | | |
| | Sign in | Cancel |



Panel Setting

 Welcome
 Control
 Panel
 Device
 General
 User
 History
 Reported Event
 Network
 Report
 Upload
 HA
 Firmware

Panel Setting

| AC Fail Report: | <u>1min</u> 1.หวขอ AC Fail Report เลือก "1 min" |
|----------------------------|---|
| Jamming Report: | |
| Periodic Test: | Interval: 24 hour Offset Period: 1 hour |
| Follow-on: | Disable 🗸 |
| Two-way Timer: | 1 min 🗸 |
| Handsfree: | Enable 🗸 |
| Callback Timer: | Disable 🗸 |
| Service Telephone: | |
| Number of Rings to Answer: | 15 sec 🗸 |
| External Tamper: | Disable 🗸 |
| High Temperature Report: | Disable 🗸 |
| Low Temperature Report: | |
| Comm. Bypass: | [PSTN+IP v] 2. หัวข้อ Comm. Bynass: เลือก "PSTN+IP" |
| Quick Arm: | |
| Quick Menu: | On 🗸 |
| Bypass Report: | On 🗸 |
| | Submit |
| | |
| Record Message: | Record Play Stop |
| Time Zone: | |
| | Change Time Zone III Bangkok |
| | |
| Date & Time: | 2021 - / 6 - / 15 - 14 - : 14 |
| L | |



9

TRAFFIC & SAFET





| Welcome 0 | <u>Control</u> | Panel | <u>Device</u> | <u>General</u> | <u>User</u> | History | Reported Event | Network | Report | Upload | <u>HA</u> | Firmware | |
|-----------|----------------|-------|---------------|----------------|-------------|---------|----------------|---------|--------|--------|-----------|-----------------|--|
|-----------|----------------|-------|---------------|----------------|-------------|---------|----------------|---------|--------|--------|-----------|-----------------|--|

Device Management

| Index | Туре | Name | Attribute | Condition | Battery | Tamper | Bypass | RSSI | Status | |
|-------------|------------------------|-------------------------|-------------------|--------------|-------------|--------|--------|------|--------|-------------|
| 01 | Door Contact | Front door | Entry1 | | | | - / | 9 | Close | <u>Edit</u> |
| □ 2 | Door Contact Test | | Entry1 | Out Of Order | Low Battery | | | | Close | Edit |
| □3 | IR | Front Meeting room(VXI) | Home Zone | | | | | 8 | | <u>Edit</u> |
| □4 | Panic Button | Branch 01 | Medical/Emergency | | | | | 9 | | Edit |
| □ 10 | IR | Front (FTN) | Trigger Scene | | | | | 9 | | <u>Edit</u> |
| Delete | Delete Bypass Unbypass | | | | | | | | | |

1.ตรวจสอบค่าระคับสัญญาณ

General Setting



 Welcome
 Control
 Panel
 Device
 General
 User
 History
 Reported Event
 Network
 Report
 Upload
 HA
 Firmware

General Setting

| Final Door: | |
|-------------------------------|--|
| Arm Fault Type: | Direct Arm 🗸 1.หัวข้อArm Fault Type: เถือก "Direct Arm" |
| Tamper Alarm: | Away Arm 🗸 |
| Burglar Abort Window: | Off • |
| Entry1 Delay: | Away Arm: Disable V Home Arm: Disable V |
| Entry2 Delay: | Away Arm: Disable V Home Arm: Disable V |
| Exit Delay: | Away Arm: Disable V Home Arm: Disable V |
| Alarm Length: | 1 min · 2. Warning Beep: 16인 No Sound |
| Supervision Timer: | 12 hour • |
| Sound Setting: | Door Chime: Low Entry Arm: Med Entry Home: Med Exit Arm: Med Exit Arm: Med Kit Home: Med Warning Beep: No Sound Internal Siren: On |
| Day Period (HHMM-HHMM): | 0711-1829 |
| Night Period (HHMM- HHMM): | 1830-0710 |
| Preset Away Arm (HHMM): | |
| Preset Disarm (HHMM): | |
| | Submit |

©2016 OPTEX CO., LTD.



Network Setting



| Welcome | Control | Panel | Device | General | User | History | Reported Event | Network | Report | Upload | HA | Firmware |
|---------|---------|-------|---------------|---------|------|---------|----------------|---------|--------|--------|----|----------|
| | | | | | | | | | | | | |

Network Setting

| DHCP: | On 🗸 |
|--------------------|--|
| IP Address: | 192.168.216.191 |
| Subnet Mask: | 255.255.255.0 |
| Gateway: | 192.168.216.253 |
| DNS: | 192.168.216.253 |
| | |
| SNTP: | pool.ntp.org |
| | |
| Test IP: | |
| Status: | Done (No Transmission) |
| | |
| Remote WAN Access | |
| | Submit |
| Web Liser: | admin |
| Web Oser. | |
| New Password: | |
| Repeated Password: | |
| | Change Password |
| YMED. | www.//kemenestel.entev.ee.in/5000 |
| XMPP: | xmpp.//nomeportal.optex.co.jp.5222 |
| Domain: | optex-home-portal |
| Buddy: | security_admin |
| Status: | Connected |
| | Reconnect 1.ตรวจสอบสถานะการเช่อมตอInternet |
| | |

หมายเหตุ หลังจาก Status ขึ้น Connected ต้องสมัคร App ให้เสร็จ ภายใน 15 นาที





 Welcome
 Control
 Panel
 Device
 General
 User
 History
 Reported Event
 Network
 Report
 Upload
 HA
 Firmware

Report Setting

1.ใส่ Report เพื่อเชื่อมต่อ กับ App

| Index | То | Group | Level |
|-------|---|-------|--------------|
| 1 | ip://127037462023@homeportal.optex.co.jp:8765/CID | 1~ | All Events 🗸 |
| Z | | 1~ | All Events 🗸 |
| 3 | | 1~ | All Events |
| 4 | | 1~ | All Events |
| 5 | | 1~ | All Events |
| 6 | | 1~ | All Events 🗸 |
| 7 | | 1~ | All Events 🗸 |
| 8 | | 1~ | All Events 🗸 |

IP (Ethernet or GPRS) in CID format, ex: ip://ACCT@server:port/CID IP (Ethernet or GPRS) in SIA format, ex: ip://ACCT@server:port/SIA PSTN, ex: pstn://ACCT@telephone Voice call, ex: voice://telephone

Submit Test

©2016 OPTEX CO., LTD.

2.กด Submit